



Canon Vixia HF R70 Battery Replacement

A detailed guide for removing and replacing the battery to your Canon Vixia HF R70

Written By: Thomas Rogienski



INTRODUCTION

Use this guide to swap out an old battery for a new one.

Step 1 — Battery




- Power off and unplug the device.
- Position the camera so that the battery is facing you.

Step 2



- Locate the latch on the bottom edge of the camera.
- Hold the battery into place and gently push down on the latch towards the lens.

Step 3

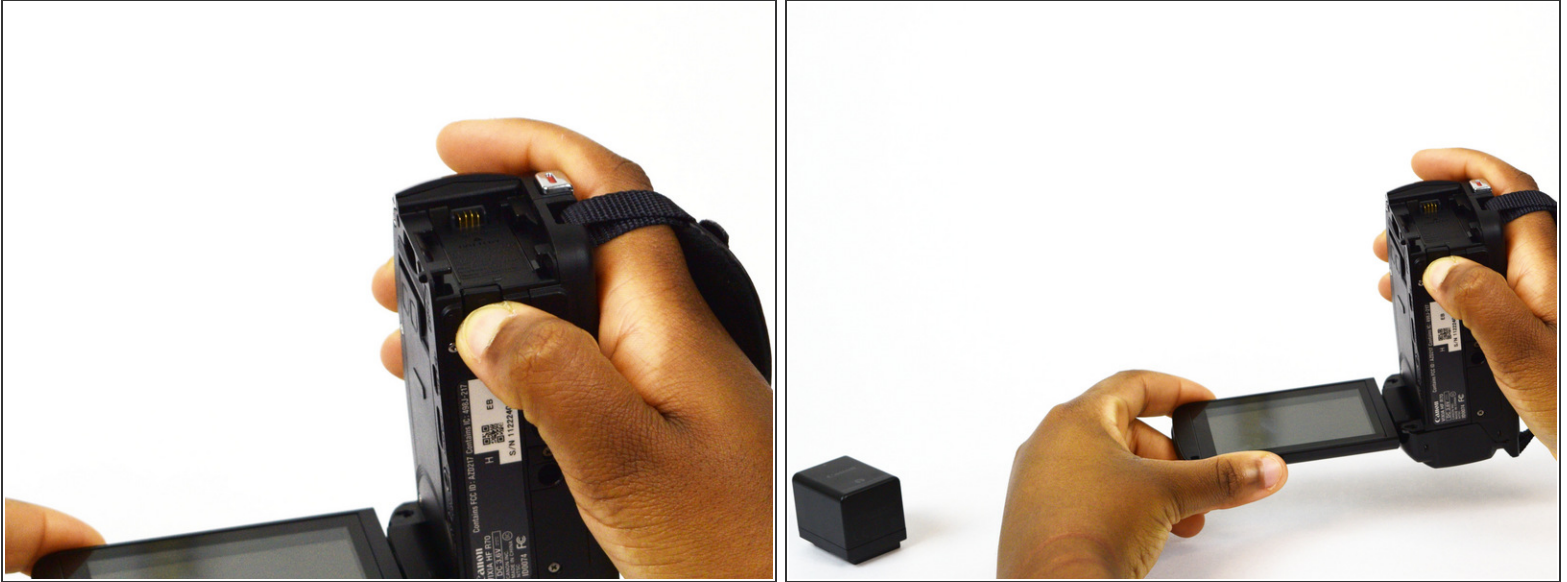

- While holding down the latch, remove the battery by pulling it out of the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-13 02:20:59 AM.